

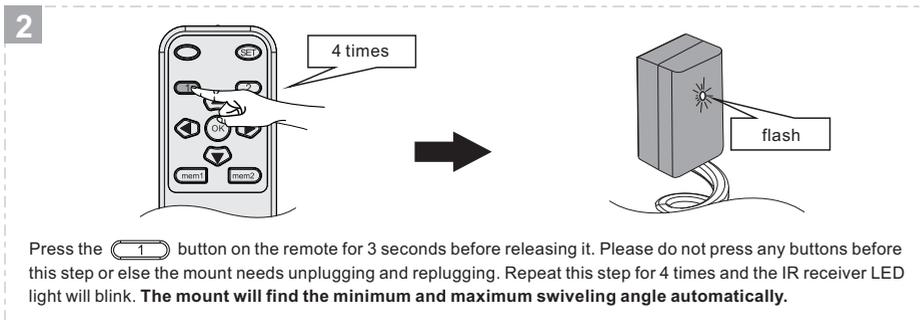


# Factory Reset instruction

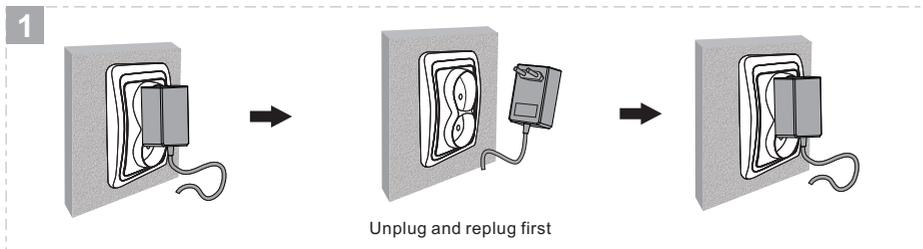

**Please keep the power on during the resetting.**

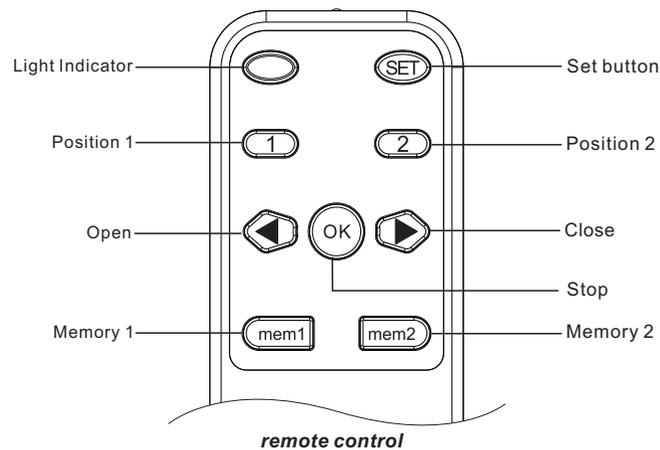


# Installation manual

## M Motorized Swing Mount Large


EAN: 7350022734500

- en Installation Manual
- ar تثبيت المنتج اليدوي
- cs Instalační manuál
- de Installationsmanual
- de Installationsanleitung
- eo Paigaldusjuhend
- el Οδηγίες εγκατάστασης
- es Manual de instalación
- fi Asennusohje
- fr Installation Manuel
- he הנחיה ליידיד
- hu Szerelési kézikönyv
- it Manuale di installazione
- jp 取り付け説明書
- kr 설치 설명서
- lt Montavimo instrukcija
- lv Uzstādīšanas rokasgrāmata
- nl Installatie handleiding
- no Installasjonshåndbok
- pl Instrukcja instalacji
- pt Manual de instalação
- ro Manual de instalare
- ru Инструкция по установке
- sk Inštaláčny manuál
- sl Navodila za montažo
- sv Installationsmanual
- tr Montaj kılavuzu
- zh 安裝手冊

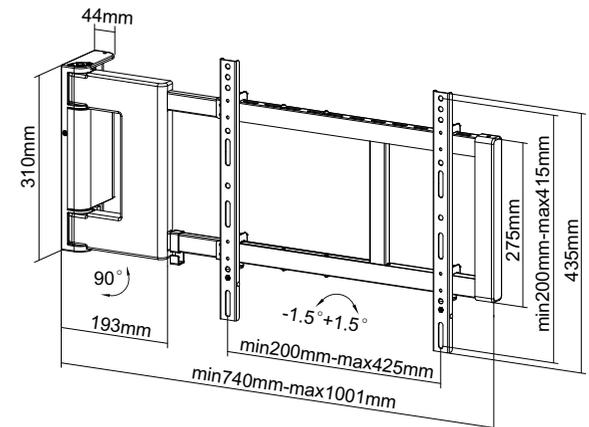






3

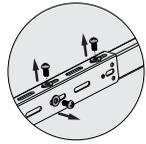



The swing arm needs to be adjusted according to the size of TV.  
 $X = TV(L)/2 + 260mm$   
L: The length of TV

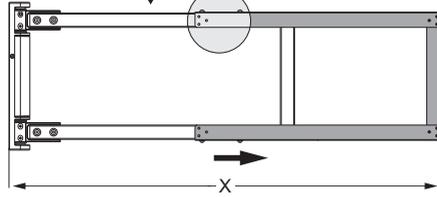



$(740mm < X < 1001mm)$

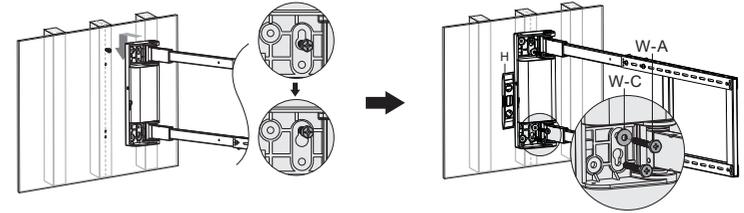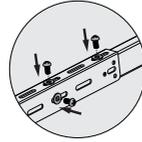




4-2b

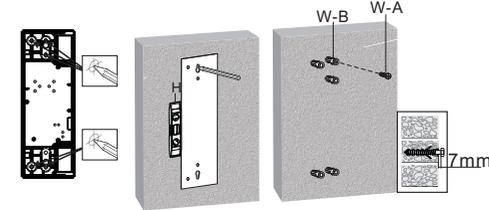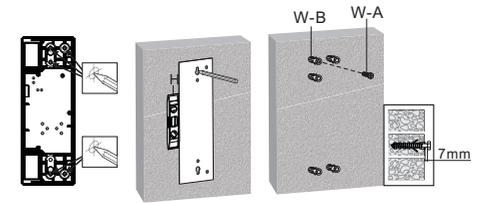



4-1

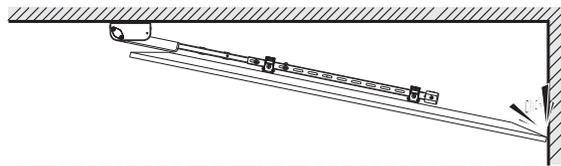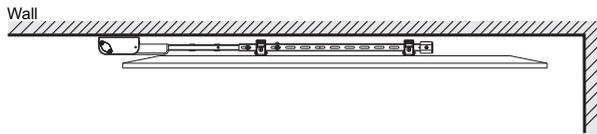


4-2a

 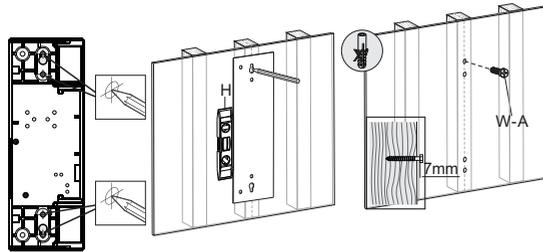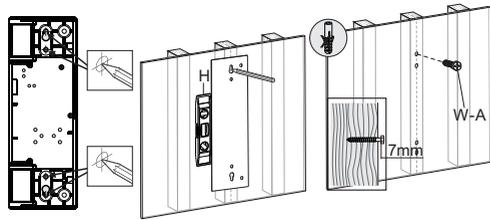


5

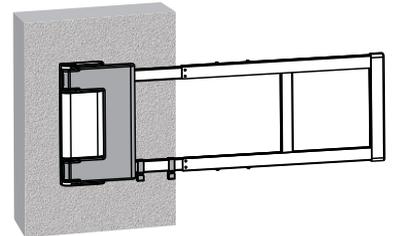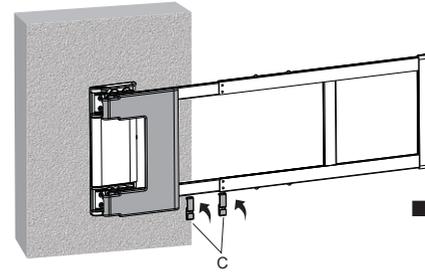


6

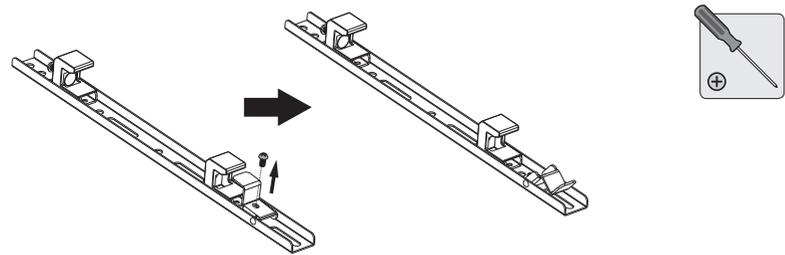


7a

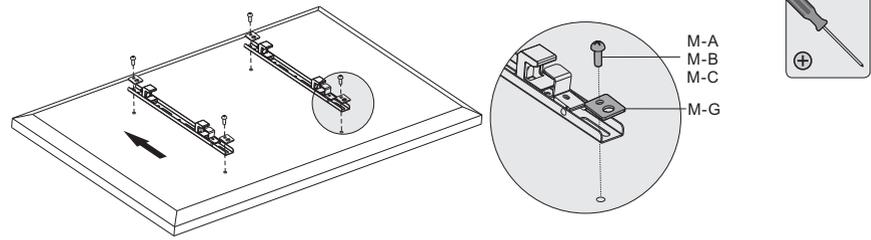


7b

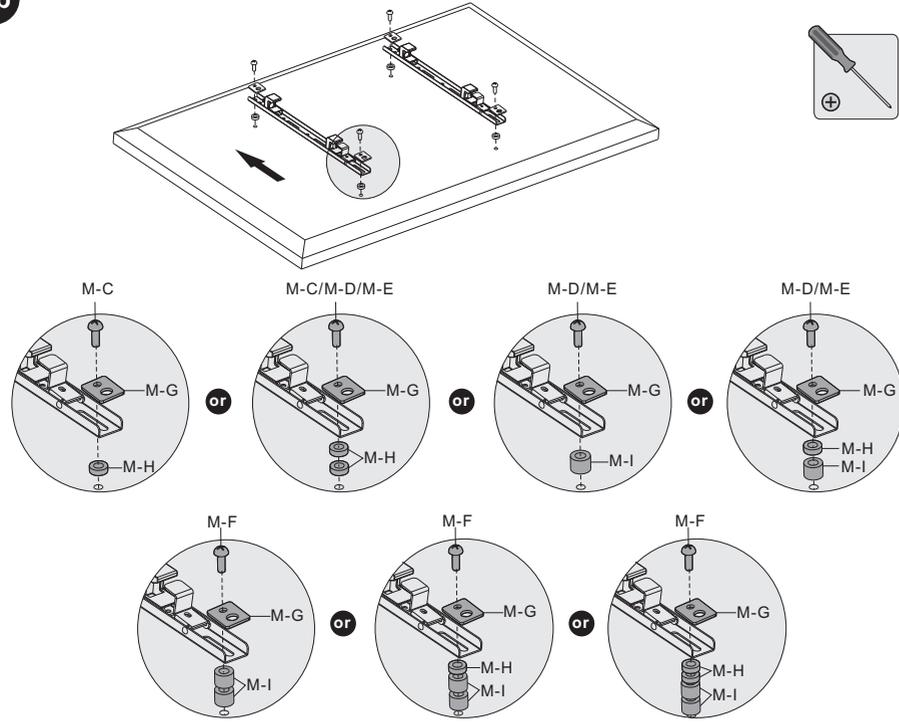


8

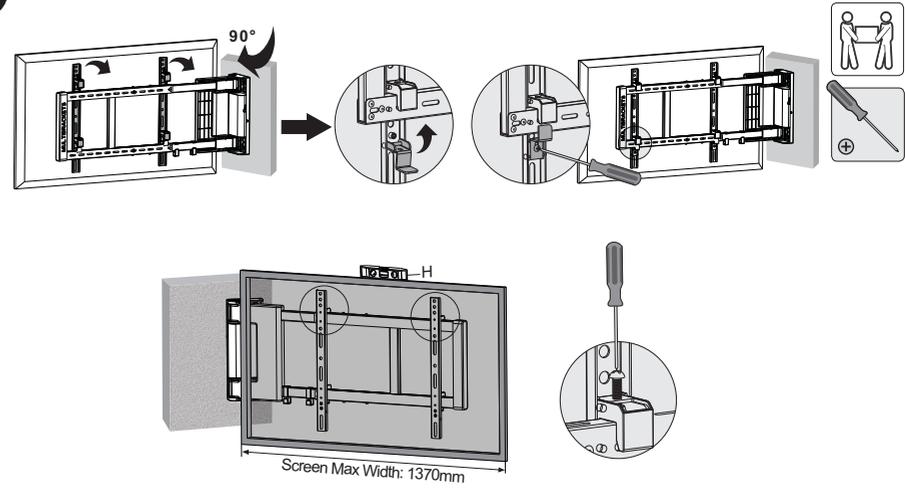


9

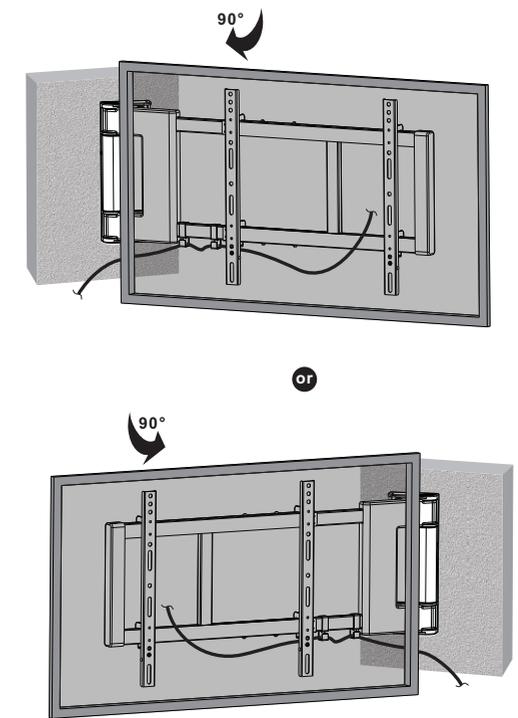

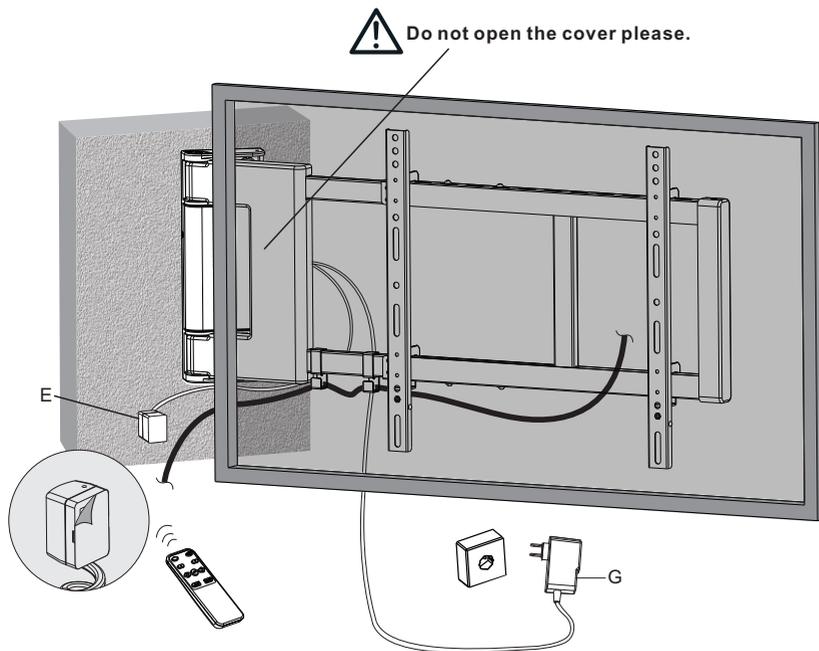

## REMOTE CONTROL OVERVIEW

RMT-01

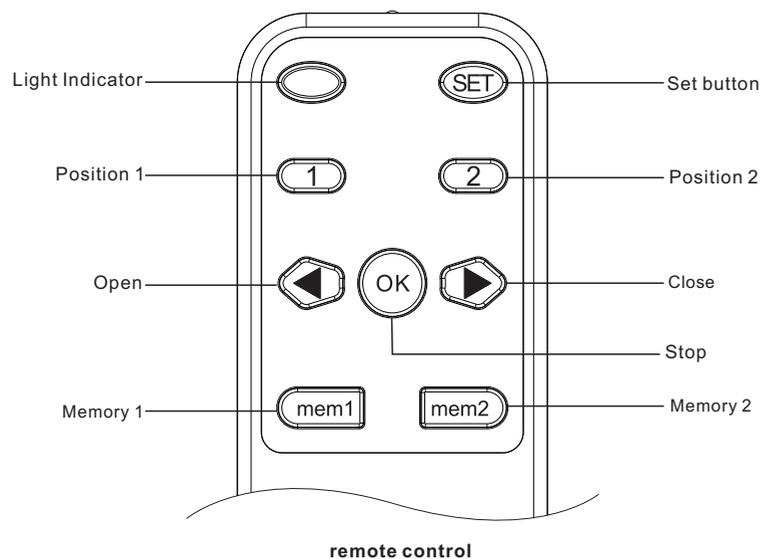

## REMOTE CONTROL OPERATION

Connect the TV mount to power, then press the "OK" button. After the TV mount adjusts to the position that aligns with the wall, you can operate the remote control.

### REMOTE CONTROL BUTTON EXPLANATION

#### OK STOP BUTTON

Stop the movement of the TV mount.

#### MOVEMENT BUTTONS

The two buttons enable the adjustment of your TV. The adjustment range is 90 degrees.

#### mem1 mem2 MEMORY BUTTONS

The TV mount can store up to 2 automatic adjustment position. Adjust the TV to your desired position. Press and hold any of the two buttons for 3s. The buzzer will beep twice, and the LED indicator turns on for 1s. The position is successfully stored.

#### 1 + OK ACTIVATE AUTOMATIC ADJUSTMENT

Press the "1" button, then press "OK" button. After the buzzer beeps once, the TV wall mount will automatically swivel to the position stored through "mem1".

#### 2 + OK ACTIVATE AUTOMATIC ADJUSTMENT

Press the "2" button, then press "OK" button. After the buzzer beeps once, the TV wall mount will automatically swivel to the position stored through "mem2".

#### SET + OK ENTER LEARN MODE

The learning mode allows your TV remote control to control the TV mount, in case you lose the original TV remote control. The instruction of how to use learning mode is in the next section.

#### 1 RESET

Reconnect the mount to power. Press and hold the "1" 3 times (each time for 3s). The TV mount will automatically reset the adjustment range. (As for customizing the adjustment range, you can hold the TV mount to fix it in a desired position until the motor stops.) In order to reset the previous learning mode, press and hold the "1" 5 times (each time for 3s).

### Maintenance



- Check that the bracket is secure and safe to use at regular intervals(at least every three months).
- Please contact your distributor if you have any questions.

**Note:** Function or not may vary from brand of TV Remote. IR standard: RC5 (Philips) is required.


**Note:** The remote control should use NO.7 AAA battery.

## LEARN MODE (A):


### How to program the buttons of TV remote with the included remote control?

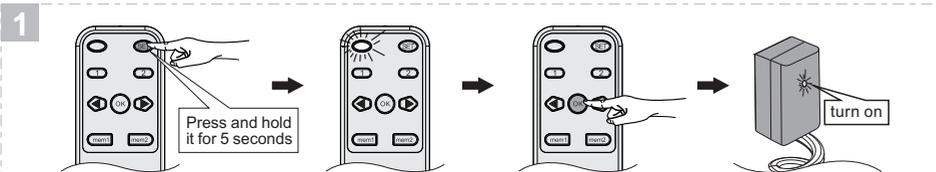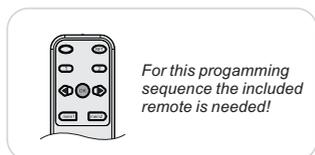


Press and hold the "SET" button for 3s. When the LED indicator on the remote control lightens continuously, press the "OK" button. The buzzer will beep once. After the IR receiver lightens, the system enters learning mode.

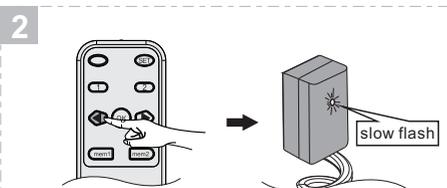

Press the "Home" button. The buzzer will beep twice, and the IR receiver will flash slowly.

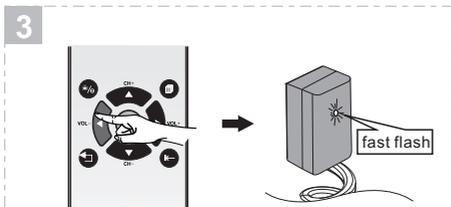

Target your TV remote control at the IR receiver, and press a button that is correspondent with the function of "OK" button. Then, the buzzer beeps three times, and the IR receiver flashes quickly.

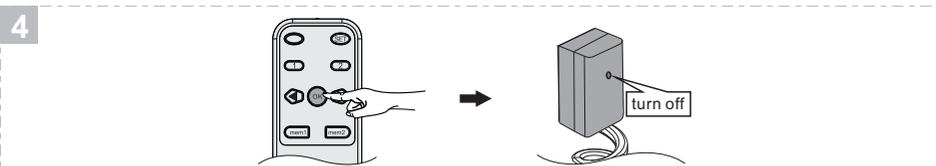

Press the "OK" button. The buzzer will beeps 4 times, and the IR receiver turn off. The duplication is successful.

**Note:** If the buzzer only beeps once, it indicates that the TV remote can't support the learning mode.


• Repeat the same process to duplicate the functions of "Play/Pause" and "OK" buttons




**Note:** If the operation of any of the steps shown above is over 20s, the system will automatically exit the learning mode.

## LEARN MODE (B):


### How to program "Power" button on the TV remote?

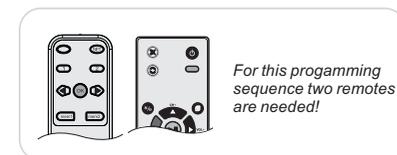


• Left and Right movement is done w/o programming.

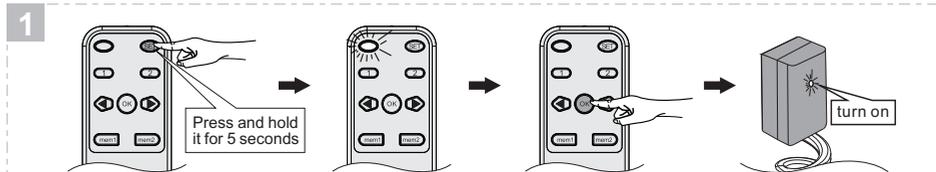


Press and hold the "SET" button for 3s. When the LED indicator on the remote control lightens continuously, press the "OK" button. The buzzer will beep once. After the IR receiver lightens, the system enters learning mode.

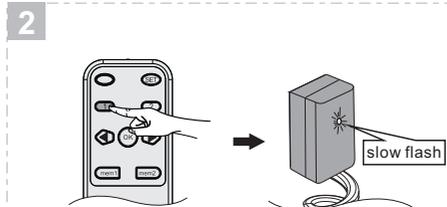

Long press the "1" button for 3s. The buzzer will beep twice, and the IR receiver will flash slowly.

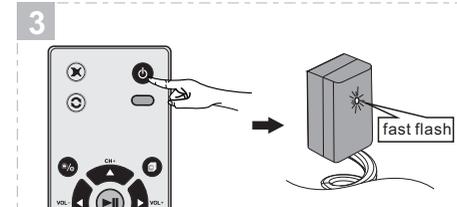

Target your TV remote control at the IR receiver, and press a button that is correspondent with the function of "1" button. Then, the buzzer beeps three times, and the IR receiver flashes quickly.

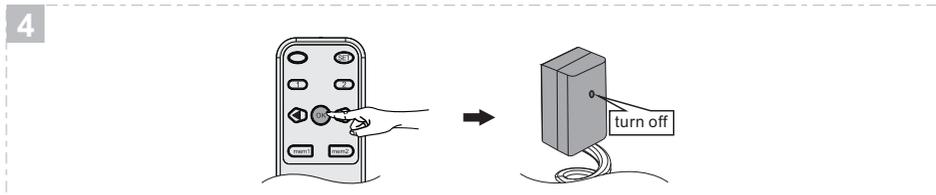

Press the "OK" button. The buzzer will beeps 4 times, and the IR receiver turn off. The duplication is successful.

**Note:** If the buzzer only beeps once, it indicates that the TV remote can't support the learning mode.



### IMPORTANT:

- ❶ The learning mode only duplicate the functions of "Home", "Play/Pause", "OK" and "1" buttons.
- ❷ No all of the TV remote controls are compatible with the learning mode.
- ❸ Please select the buttons on the TV remote control that won't activate changes in both TV and TV mount.
- ❹ With learn mode there is no need to switch between remote controls.