


# Installation manual

## M Motorized Public Floorstand Dual Pillar 180 HD

EAN: 7350105213120

- en Installation manual
- ar تثبيت لآلة ليد
- cz Instalační manuál
- da Installationsmanual
- de Installationsanleitung
- eo Paigaldusjuhend
- el Οδηγός εγκατάστασης
- es Manual de instalación
- fi Asennusohje
- fr Installation Manuel
- he הנקתה ירידמ
- hu Szerelési kézikönyv
- it Manuale di installazione
- jp 取り付け説明書
- kr 설치 설명서
- lt Montavimo instrukcija
- lv Uzstādīšanas rokasgrāmata
- nl Installatie handleiding
- no Installasjonshåndbok
- pl Instrukcja instalacji
- pt Manual de instalação
- ro Manual de instalare
- ru Инструкция по установке
- sk Inštaláčny manuál
- sl Navodila za montažo
- sv Installationsmanual
- tr Montaj kılavuzu
- zh 安装手册

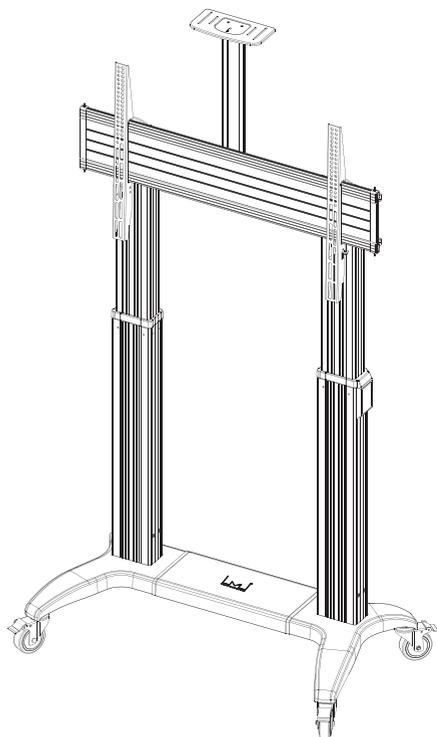

**en** **IMPORTANT!**  
Your Plasma, LCD, TV, Projector, Projector Screen or other HiFi equipment represents a considerable value.  
If screws are included they may not be suitable for the material of your wall, ceiling or floor. Replace the screws with suitable ones if needed.  
In case you are unsure regarding any aspects of the mounting of this product please Consult a professional.

**ar**  
أهمية المبرackets LCD أو التلفاز أو جهاز العرض أو شاشة جهاز العرض أو أجهزة العرض الأخرى ذات قيمة عالية. قيمت المبرackets وربما غير ذلك التي تشملها المبرackets المدمر أو التلف أو الأضرار.  
في حالة عدم اليقين بأي جوانب من تركيب هذا المنتج، يرجى استشارة الفني متخصص.

**cz** **DŮLEŽITÉ!**  
Váš plazmový nebo LCD televizor, projektor, plátno a další elektrotechnické vybavení je vysoce hodnotné.  
Pokud jsou součástí balení produktu šrouby, zkontrolujte, zda jsou vhodné pro upevnění ke stěně, stropu nebo podlaze v místě instalace.  
V případě, že nebudou přibalené šrouby vyhovovat, vyměňte je.  
Pokud budete mít při montáži tohoto produktu pochyby, obraťte se na zkušeného odborníka.

**da** **VIGTIGT!**  
Din plasmaskærm, LCD-skærm, tv, projektor, projektorsskærm eller andet HiFi-udstyr repræsenterer en betydelig værdi. Hvis der medfølger skruer, passer de muligvis ikke til materialet i væggen, loftet eller gulvet. Udskift skruerne med passende skruer, hvis det er nødvendigt.  
Hvis du er i tvivl om noget i forbindelse med monteringen af produktet, skal du kontakte en ekspert.

**nl** **BELANGRIJK!**  
Uw Plasma, LCD TV, Projector, Projector scherm of andere HiFi-apparatuur vertegenwoordigt een aanzienlijke waarde.  
Het kan zijn dat de bijgeleverde schroeven niet geschikt zijn voor uw toepassing. In dat geval dient u ze te vervangen door schroeven die wel geschikt zijn. Twijfelt u, raadpleeg dan een professional.

**ee** **TÄHTIS!**  
Teie telet, projektor, projektori ekrään või muu HiFi seade on suure väärtusega. Kui kinnitused on komplektis paigalduskruvid, siis ei pruugi need sobida Teie seinale, lae või põrandale materjaliga. Vajadusel vahetage vahetage kruvid sobivate vastu.  
Kui Te ei ole seadme paigaldamise detailides kindel, siis konsulteerige spetsialistiga.

**de** **ACHTUNG!**  
Ihr Plasma-, LCD-, TV-Gerät, Ihr Projektor, Ihre Leinwand oder sonstige HiFi-Ausrüstung stellen einen beträchtlichen Wert dar. Die möglicherweise im Lieferumfang enthaltenen Schrauben sind unter Umständen nicht für das Material Ihrer Wände, Decken oder Böden geeignet. Ersetzen Sie sie bei Bedarf durch geeignete Schrauben.  
Wenn Sie bezüglich der Montage des Produkts unsicher sind, wenden Sie sich an einen Fachman

**el** **ΣΗΜΑΝΤΙΚΟ!**  
Οι τηλεοράσεις Plasma, LCD, α κανονικές τηλεοράσεις, οι οθόνες προβολών ή άλλες συσκευές HiFi έχουν μία αξιοσημείωτη αξία. Αν περιλαμβάνονται βίδες, ίσως να μην είναι κατάλληλες για το υλικό του τοίχου, του τavanού ή του πτωματικού σας. Αντικαταστήστε τις βίδες με κατάλληλες αν είναι απαραίτητο.  
Στην περίπτωση που δεν είστε σίγουροι για κάποιες ζητήματα σχετικά με την προαρθρία αυτού του προϊόντος, παρακαλούμε συμβουλευτείτε έναν ειδικό.

**es** **IMPORTANT!**  
Los equipos de plasma o LCD, los televisores, proyectores o pantallas de proyección, así como otros equipos de alta fidelidad suponen una inversión considerable. Si incluyen tornillos, puede que no sean adecuados para el material del que están formados la pared, el techo o el suelo. Sustituya estos tornillos por otros más adecuados si es preciso.  
Si no está seguro sobre cualquier aspecto del montaje de este producto, consulte a un profesional.

**fi** **TÄRKEÄÄ!**  
Plasma- tai nestekidenäyttötien, televisioiden, projektorien ja niiden valkokankaiden sekä muiden hiifiteiden arvo on huomattava. Laiteen mukana toimitettavat ruuvit eivät välttämättä sovellu seinien, katon tai lattian materiaaliin. Korvaa ne tarvittaessa sopivilla ruuveilla.  
Mikäli olet epävarma mistä tahansa tämän tuotteen kiinnittämiseen liittyvästä seikasta, ota yhteyttä asiantuntijaan.

**fr** **IMPORTANT!**  
Vos écrans plasma, LCD, télévisions, projecteurs, écrans de projection ou autre matériel HiFi ont une valeur considérable. Les vis fournies peuvent ne pas être compatibles à la nature de vos murs, plafonds et sols. Remplacez-les par des vis adaptées.  
Si vous avez des doutes quant à montage de ce produit, veuillez consulter un professionnel.

**hu** **FONTOSS!**  
Plazma, LCD TV-á, projektorod, vetítőlévásznd vagy egyéb műszaki berendezéseid tekintélyes értékét képviseli. Ha a csavarok tartalmazza, akkor sem biztos, hogy alkalmas a berendezés, hogy falra, mennyezetre, vagy a padlóhoz rögzítsd. Cseréld ki a csavarokat a megfelelőre, ha szükséges. Abban az esetben, ha nem biztos a termék beépítésével kapcsolatban, forduljon szakemberhez.

**it** **IMPORTANT!**  
I vostri plasma, LCD, tv, proiettori, schermi di proiezione o altri apparecchi Hi-Fi rappresentano un notevole investimento. Le viti in dotazione potrebbero rivelarsi non adatte per il materiale della parete, del soffitto o del pavimento. Sostituitele quindi con viti più idonee in caso di necessità.  
Nel caso riscontrate problemi nel montaggio di questo prodotto, consultate un tecnico specializzato.

**jp** **重要!**  
あなたのプラズマ、LCDは、テレビ、プロジェクタ、プロジェクタースクリーンまたは他のハイファイ機器はかなりの値を表します。  
ネジが含まれている場合、彼らはあなたの壁、天井や床の材質に適していないかもしれません。  
必要に応じて適切なものでネジを取り付けます。  
ケースでは、本製品の取り付けのいずれかの側面に關して不明な点があるプロに相談してください。

**no** **VIKTIG!**  
Din plasma, LCD, TV, projektor, projektorsskjerm eller annet HiFi-utstyr har betydelig verdi. Hvis skruer følger med, er det ikke sikkert at de passer til materialet i veggen, taket eller gulvet. Bytt skruene i skruer som er egnet om nødvendig.  
Hvis du er usikker når det gjelder monteringen av dette produktet, må du kontakte en profesjonell.

**pl** **UWAGA!**  
Monitor plazmowy, LCD, telewizor, projektor, ekran projekcyjny lub inny sprzęt HiFi stanowi znaczącą wartość. Jeśli dołączono do niego śruby mocujące, mogą one nie być odpowiednie do materiału, z którego wykonane są dane ściany, sufit lub podłoga. W razie potrzeby należy je zastąpić odpowiednimi śrubami.  
W razie jakichkolwiek wątpliwości dotyczących montowania tego urządzenia należy zasięgnąć porady u specjalisty.

**pt** **IMPORTANT!**  
O seu Plasma, LCD, TV, projetor, tela de projeção ou outro equipamento de HiFi representa um valor considerável.  
Se os parafusos estão incluídos eles podem não ser adequados para o material da sua parede, teto ou chão.  
Substitua os parafusos com os adequados, se necessário.  
Em caso de dúvida sobre quaisquer aspectos da montagem deste produto, consulte um profissional.

**li** **SVARIG!**  
Jūsu Plasma, LCD, TV, projektor, projektorā ekrāns vai cita HiFi iekārtas veido ievērojamu vērtību.  
Iekārtās skrūves var būt nepiemērotas jūsu sienai, griestam vai grīdas materiālam.  
Nomainiet skrūves ar piemērotām skrūvēm, ja nepieciešams.  
Gadījumā, ja jūs nesat pārliecināts par jebkuru šio produkta montāžas un stiprinājumu aspektiem, lūdzim konsultēties ar speciālistu.

**lt** **SVARBU!**  
Jūsų plazminis TV, LCD, LED televizorius, projektorius, projektoriaus ekranas ar kita HiFi įranga turi didelę vertę.  
Jei varžtai yra komplekte, jie gali netikti pas Jus panaudotoms sienai, lubų ar grindų medžiagoms.  
Pakeiskite varžtus į tinkamus, jei reikia.  
Jei nesitė tikras dėl bet kuro šio produkto montavimo aspekto- prašome kreiptis į profesionalus.

**ro** **IMPORTANT!**  
Plasma ta, LCD, TV, proiector, ecran de proiectie sau alte echipamente HiFi reprezintă o valoare considerabilă.  
In cazul in care suruburile sunt incluse ele nu pot fi potrivite pentru materialul peretelui dvs., tavan sau podea.  
Remontati suruburile cu cele adecvate, dacă este necesar.  
In cazul in care nu sunteți sigur cu privire la orice aspecte ale montării acestui produs vă rugăm să consultați un profesionist.

**ru** **ВНИМАНИЕ!**  
Какие бы оборудованием HiFi вы ни пользовались, будь то плазменный, ЖК или стандартный телевизор, проектор или проекционный экран, все они представляют значительную ценность. Не всегда крепления, прилагаемые в комплекте, подходят к материалу ваших стен, потолка или пола. При необходимости замените их на более подходящие.  
Если у вас есть какие-либо сомнения относительно того, как крепить данный продукт, пожалуйста, проконсультируйтесь у квалифицированного специалиста.

**sv** **VIKTIG!**  
Din plasmaskärm, LCD-skärm, TV, projektor, projektorsskärm eller annan HiFi-utrustning representerar ett ansenligt värde. Om skruvar medföljer utrustningen är det inte säkert att de passar för materialet i väggen, taket eller golvet! Byt ut skruvarna mot lämpliga skruvar om så krävs. Kontakta en expert om du är osäker på något i samband med monteringen av produkten.

**sk** **DŔLEŽITÉ!**  
Váš plazmový alebo LCD televizor, projektor, plátno a ďalšie elektrotechnické vybavenie je vysoko hodnotné.  
Pokiaľ sú súčasťou balenia produktu skruhy, skontrolujte, či sú vhodné pre upevnenie k stene, stropu alebo podlahe v mieste inštalácie.  
V prípade, že nebudú priložené skruhy vyhovovať, vymeňte ich.  
Pokiaľ budete mať pri montáži produktu pochyby, obráťte sa na skúseného odborníka

**sl** **POMEMBNO!**  
Vaš Plasma, LCD, TV, projektor, projekcijsko platno ali drugo HiFi oprema predstavja pomembno vrednost.  
Ce so vključeni vijaki ne smejo biti primerni za material svojega steno, strop ali tla.  
Ponovno namestite vijake z ustreznimi tiste, če je potrebno.  
V primeru, da ste prepričani o vseh vidikih vgradnje tega izdelka se obrnite na strokovnjaka.

**tr** **ÖNEMLİ!**  
Plazma, LCD, TV, Projektör, Projektör Ekranınız veya diğer HiFi cihazınız sen derede değerlidir. Birlikte verilen vidalar duvar, tavan veya döşeme teçhizatınıza uygun olmayabilir. Gerektiğinde vidaları uygun olanlarla değiştirin.  
Bu ürünü monte edilebilir ileri ilgili sorunlarınız olmasi halinde bir uzmandan yardim alin.

**zh** **重要提示!**  
Plasma、LCD、TV、投影机、投影仪屏幕或其它HiFi设备都有相当不菲的价值。如果附有螺钉它们可能不适合您的墙壁、天花板或地板。如果需要请将螺钉更换为适当的型号。  
如果对本产品安装的任何方面有疑问请咨询专业人员。

**Warning!**

Always check the depth of the holes before starting an installation.

تحذير

الرجاء دائما معق التتوب قبل أن تبدأ في عملية التركيب.

**ADVARSELI**

Kontrollere alltid hullernes dybde, før du går i gang med en installasjon.

**WARNUNG!**

Vor Beginn des Einbaus immer die Tiefe der Bohrungen überprüfen.

**ΠΡΕΙΔΟΠΟΙΗΣΗ!**

Ελέγχετε πάντοτε το βάθος των οπών προτού ξεκινήσετε την εγκατάσταση.

**WARNING!**

Always check the depth of the holes before starting an installation.

**[AVISO]**

Controle siempre la profundidad de los agujeros antes de iniciar una instalación.

**VAROITUS!**

Selviä rakennusvaiheeseen ennen asentamisen aloittamista.

**ATTENTION !**

Vérifiez toujours la profondeur des trous avant de commencer l'installation.

**ATTENZIONE!**

Verificare sempre la profondità dei fori prima dell'installazione.

**Varovani!**

Pred začatkom instalace vždy zkontrolujte potřebnou hloubku všech otvorů.

**ADVARSELI**

Sjekk alltid hvor dype hullene er før du begynner å montere.

**OSTRZEŻENIE!**

Przed przystąpieniem do montażu należy koniecznie sprawdzić głębokość otworów.

**ПРЕДУПРЕЖДЕНИЕ!**

Перед установкой всегда проверяйте глубину отверстий.

**VAROITUS!**


Kontrollere alltid hullens djup innan en installation påbörjas.

**UYARI!**

Montaja başlamadan önce delma deliklerin derinliğini kontrol edin.

**警告!**

請始終在開始安裝前檢查孔洞的深度。

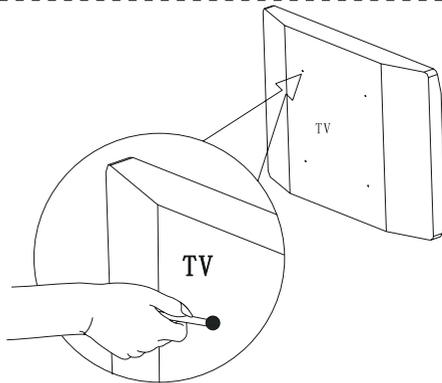**WARRANTY CARD**

MULTIBRACKETS.COM

**MULTIBRACKETS™ Limited Warranty**

Multibrackets warrants its products to be free of defects in material and workmanship for the product's Warranty Period. The Warranty Period commences on the original purchase date of the product.

All Multibrackets products are covered by a limited product warranty:

- **FIVE (5) years** for metal video monitor mounts; all racks and non-electrical rack accessories

- **TWO (2) years** for gaslifts and sit-stand workstations

- **ONE (1) year** for all motorized and/or automated products, plastic speaker mounts, all speaker stands; all furniture; all wood (MDF) accessories


For warranty claims made during the Warranty Period, MULTIBRACKETS will replace any defective product part free of charge. Should a part on your Multibrackets product fail, please create an RMA case on [www.multibrackets.com/support](http://www.multibrackets.com/support) to make a warranty claim. We will await your documentation and then discuss the problem with you and once we confirm the product is under warranty, we will ship replacement parts to you. This Limited Warranty does not cover the costs of removing and replacing defective parts from your Multibrackets product. So, if your problem requires a repair technician, you must pay any labor charges.

This Limited Warranty extends only to the original purchaser of the product and is automatically void if your Multibrackets product is modified in any way, improperly installed, taxed beyond its stated weight capacity or otherwise misused or abused. All Multibrackets products are intended for indoor use only and any

outdoor use voids this Limited Warranty. The Limited Warranty for wall and ceiling mounts is void if the mount is moved from its initial installation. To the maximum extent permitted by applicable law, Multibrackets disclaims any other warranties, express or implied, including warranties of fitness for a particular purpose and warranties of merchantability. Multibrackets will not be liable for any damages whatsoever arising out of the use or inability to use its products, even if Multibrackets has been advised of the possibility of such damages. To the maximum extent permitted by applicable law, Multibrackets disclaims any responsibility for incidental or consequential damages.

Multibrackets™ Stockholm Sweden 2016.  
[www.multibrackets.com](http://www.multibrackets.com)


The content of this manual is subject to change without further notice. The latest version of this manual can be found online under the product name on the website: [www.multibrackets.com](http://www.multibrackets.com)

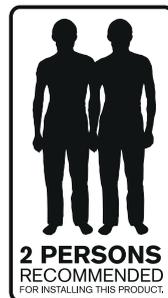

# Table of Contents

Table of contents and product maximum weight representation .....	4/17
Warning .....	5/17
Parts list .....	6/17
Assembly and installation	
1. Base installation .....	7/17
2. Columns to base installation .....	8/17
3. Column electric wire management .....	9/17
4. TV plate installation .....	10/17
5. How to use control panel .....	11/17
6. Fix vertical rails onto the back of TV .....	12/17
7. TV assembly to cart installation .....	13/17
8. Video tray installation .....	14/17
9. Cautions .....	15/17
10. Product specifications .....	17/17

● Can fit smaller or larger TVs depending upon VESA and TV weight.

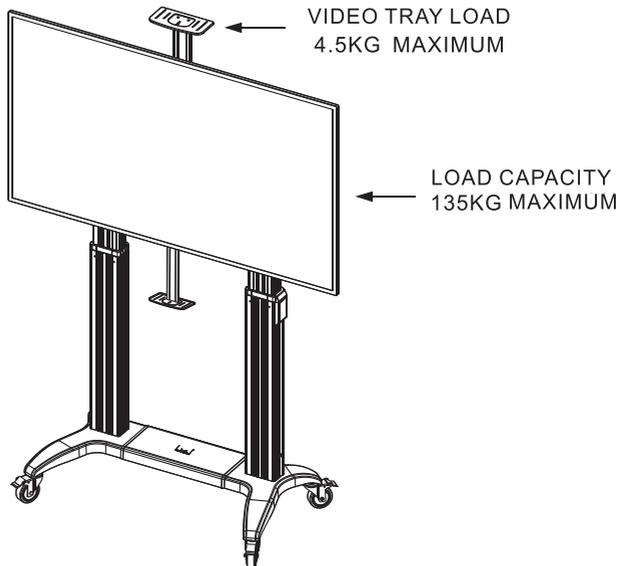

# WARNING!

Severe personal injury and property damage can result from improper installation or assembly. Read the following warning carefully before beginning.






- If you do not understand the instructions or have any concerns or questions, please contact a qualified local installer.
- Do not install or assemble if the product or hardware is damaged or missing, if you require replacement parts, please contact your local distributor for assistance.
- This product fits most 65"-11 O" LCD / plasma screen; maximum weight of LCD/plasma screen:135kg
- Do not use this product for anything other than the original design.
- This product contains moving parts, please use with caution.
- The manufacturer disclaims any liability for the modifications, improper installation, or installation over the specified weight range. The manufacturer will not be liable for any damages arising out of the use of, or inability to use, the product.
- Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child." or equivalent.
- Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child." or equivalent.
- Use with products heavier than the maximum weights indicated may result in instability causing possible injury.

All images are for reference, to prevail in product.

## Manual

							
Tightening Direction	Loosening Direction	Phillips Screwdriver	Metre Rule	Adjustment	By Hand	Hex Wrench	+Tightening -Loosening

# Parts List

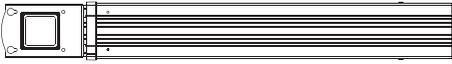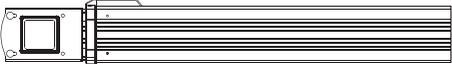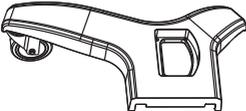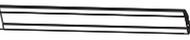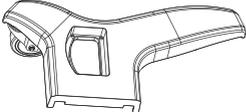
<p>1</p> <p><b>L</b></p>  <p>1X</p>	<p>6</p> <p><b>R</b></p>  <p>1X</p>	
<p>2</p> <p><b>R</b></p>  <p>1X</p>	<p>7</p> <p><b>L</b></p>  <p>1X</p>	
<p>3</p>  <p>1X</p>	<p>8</p>  <p>2X</p>	
<p>4</p> <p><b>L</b></p>  <p>1X</p>	<p>9</p>  <p>1X</p>	<p>10</p>  <p>1X</p>
<p>5</p> <p><b>R</b></p>  <p>1X</p>	<p>11</p>  <p>1X</p>	<p>12</p>  <p>1X</p>
<p>13</p>  <p>2X</p>	<p>14</p>  <p>2X</p>	
<p>15</p>  <p>1X</p> <p>Just FYI</p>	<p>16</p>  <p>1X</p>	

A1 4X	B1 4X	C1 4X	D1 4X	E1 4X	F1 4X
					
M10×15mm	M8×25mm	M6×25mm	M5×25mm	Φ16×Φ6.2×1.5mm	Φ15×Φ8.2×10mm


A2 8X	B2 8X	C2 8X	D2 4X	E2 1X	F2 1X	G2 2X
						
M8×40mm	M8×16mm	M8×20mm	M4×12mm	5mm	6mm	16.5*12.5*2.0

# 1. Installation of wheelbase


Step 1

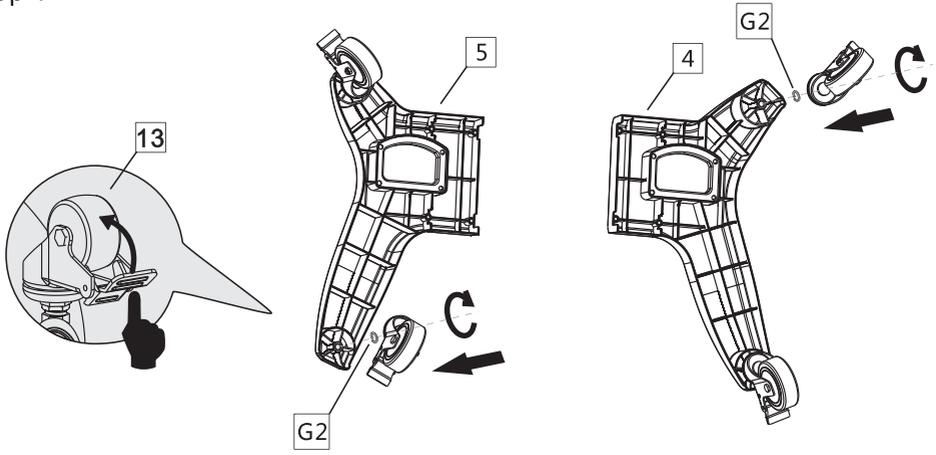

Step 2

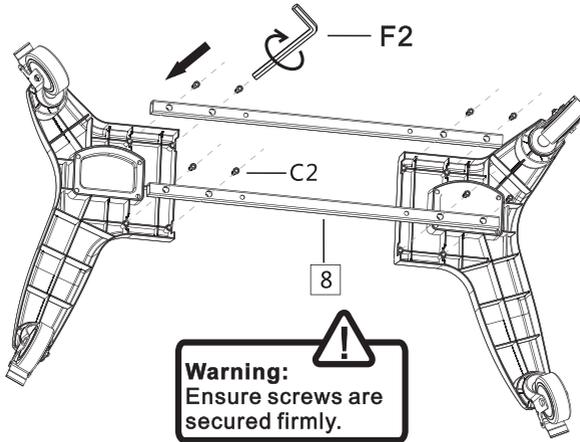


Step 3

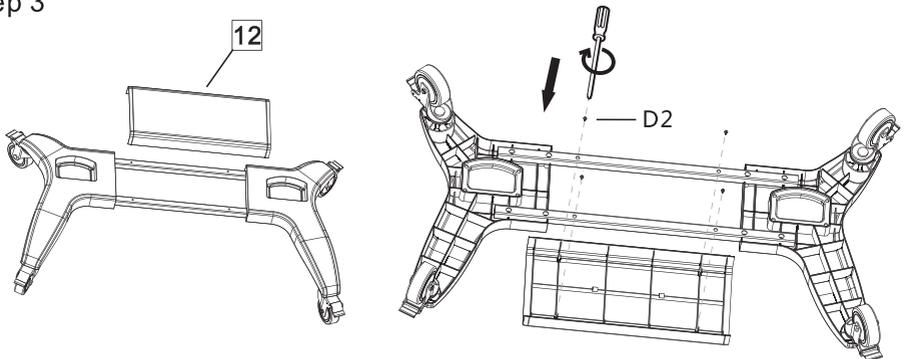


## 2. Columns to base installation

### Step 1

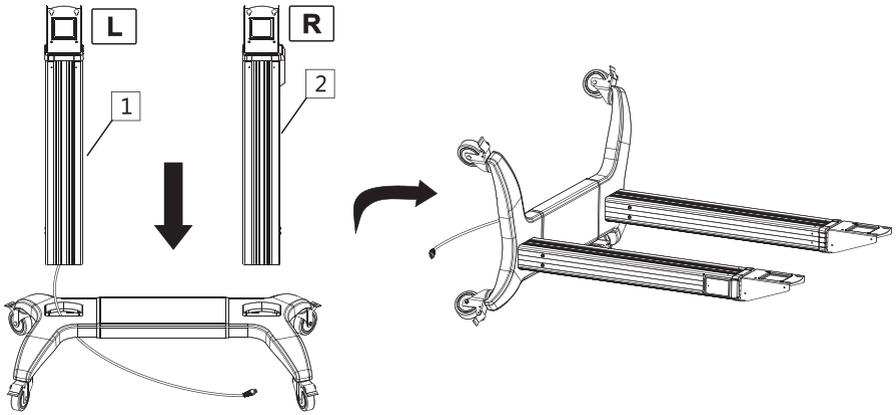


### Step 2

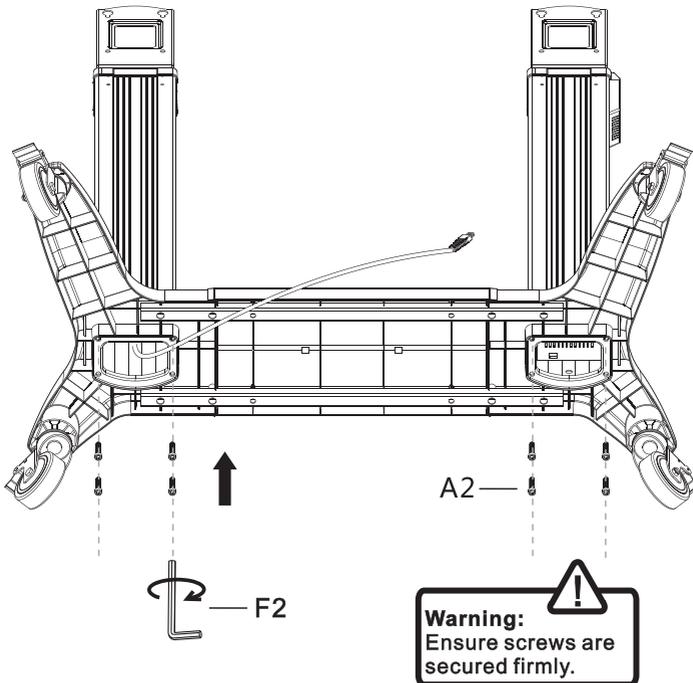


### 3. Column electric wire management


Step 1

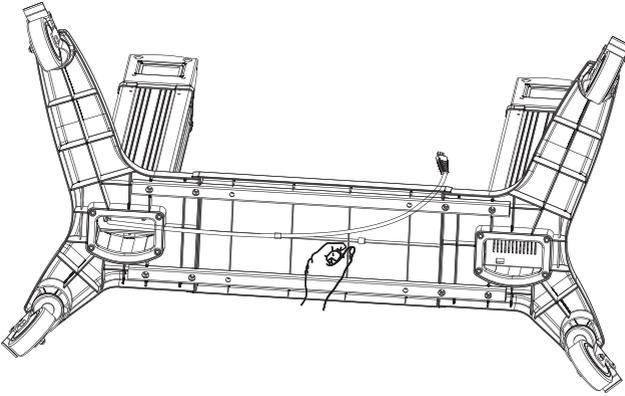



Step 2

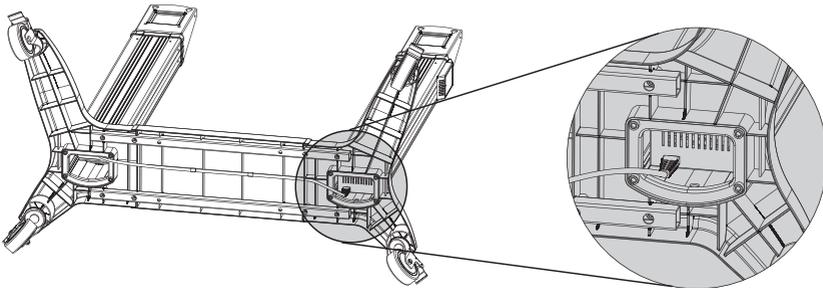



Step 3

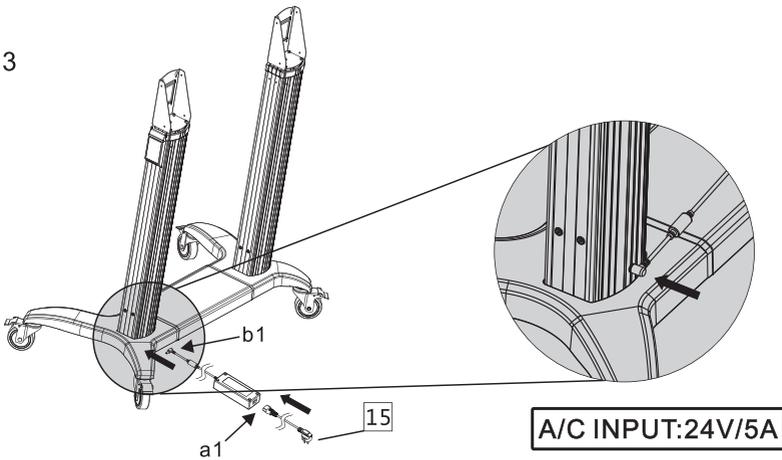


## 4. TV plate installation

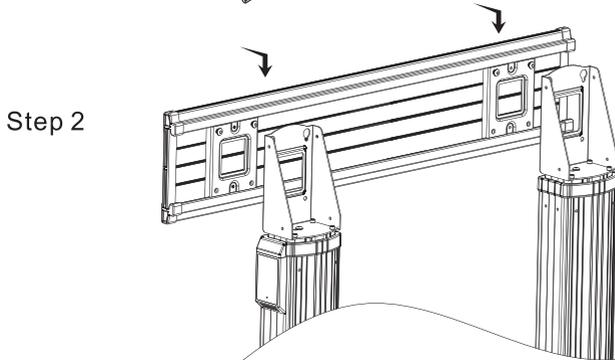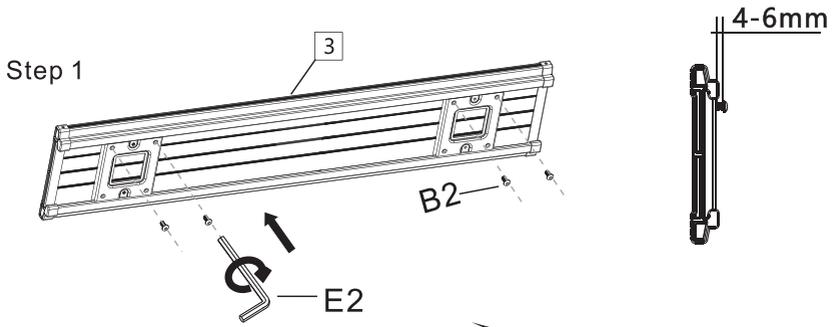

**Warning:**  
Ensure screws are secured firmly.

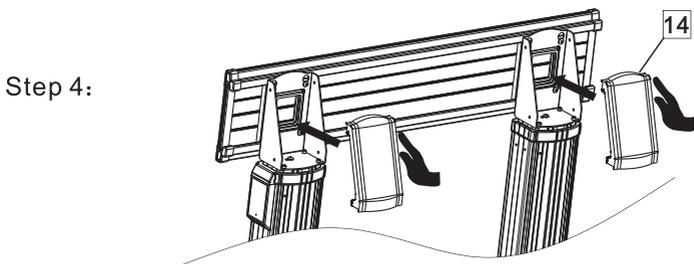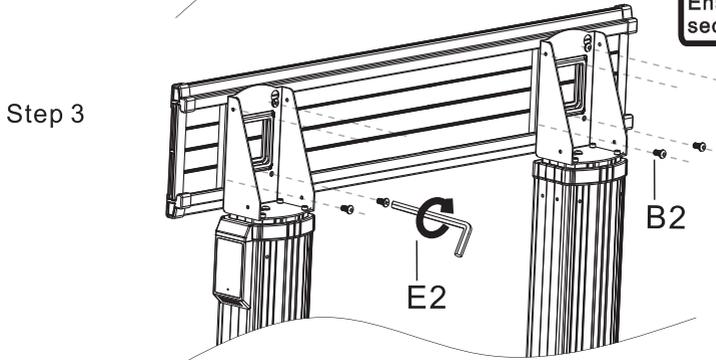

# 5. How to use the control panel

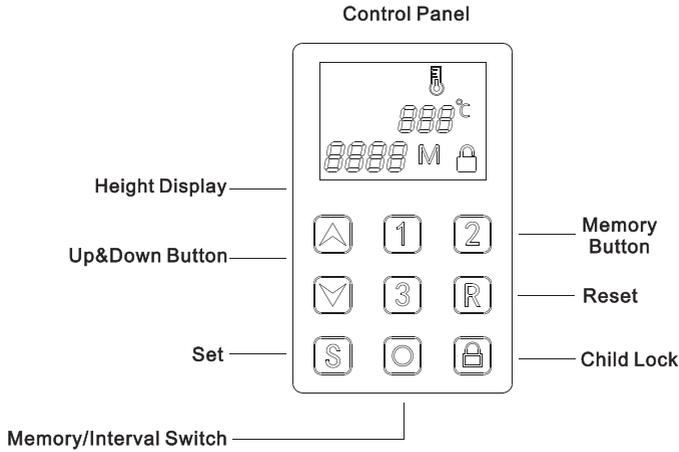


### Reminder:

Please initialize this cart before a TV/Display is mounted on. After a current of 100~240V is switched on, press button R for two seconds, the cart starts the process of initialization, the cart can be used properly only after 1200 displayed on the control panel.

Height Adjustment	Columns run upwards when  button is pressed and down wards when  button is pressed.
Memory Setting	Press button  to switch the function of memory setting or distance setting. When "M" is lightened, memory setting can be operated. Press  or  to your desired height, and press button "S" for two seconds, when "S--"flashes, you can press either button 1, 2, 3, and the height setting is done. Press the number button for two seconds, the preset height is active to use.
Interval Setting	Press button , when  is lightened, distance setting can be operated. Press button "S" for two seconds, when "S-up" flashes on the control panel, press  to the upper limit. Press button  for two seconds to confirm this top height. When "S-dn" flashes, press  to the lower limit. Press button  for two seconds to confirm this bottom height.(If the interval is less than 50mm, or the upper and lower position are set upside down, "SErr" will be displayed to remind you setting invalid. Please re-set it)
Child Lock	Press  for two seconds, all the keys become invalid. To resume the function, please press  for two more seconds. Please enable child lock after you adjust the product to your desired height, to avoid any potential accidents by unaware touch on control keys.
Initialization	Press button R for two seconds, initialization is active and will complete after 1200 displayed on the control panel.

## 6. Fix the vertical rails onto the back of the TV

### Step 1

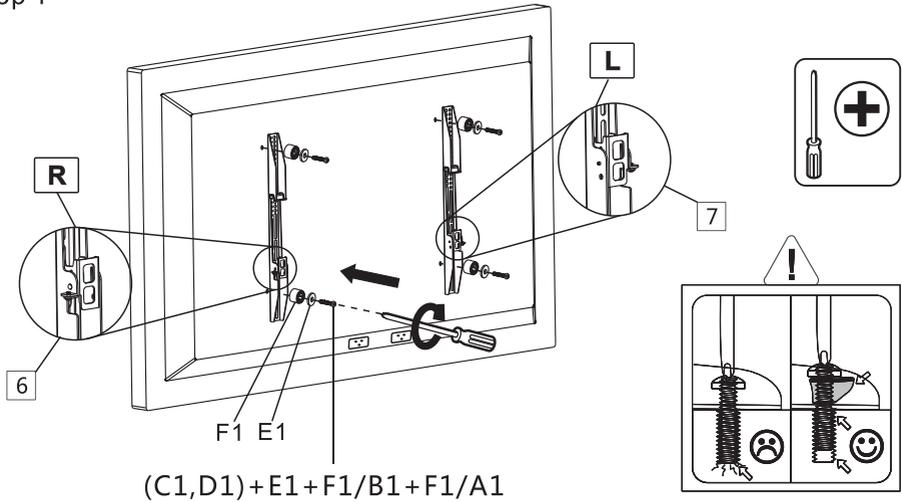


#### Notes:

Plastic spacers must be used (except for A1) when assemble adaptor onto your TV to avoid TV threaded holes damaged when thread holes are shallow.

#### Warning:


Ensure screws are secured firmly.

M8\*25mm(B1)

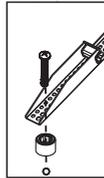


M5\*25(D1)

M6\*25(C1)

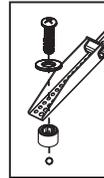


### Step 2

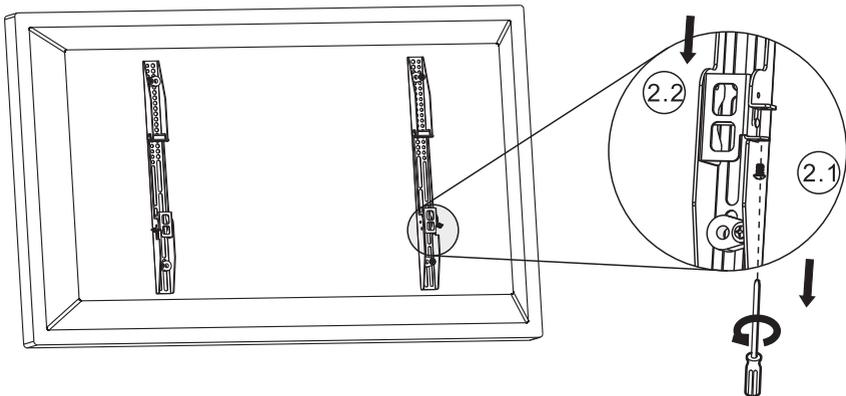


## 7. TV assembly to cart installation


Step 1

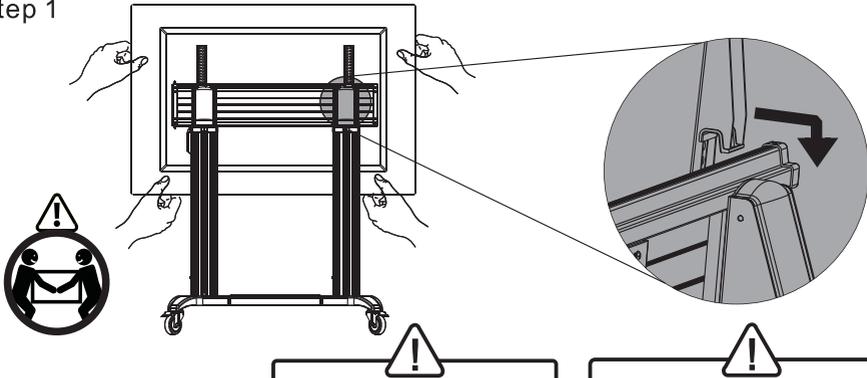

Step 2

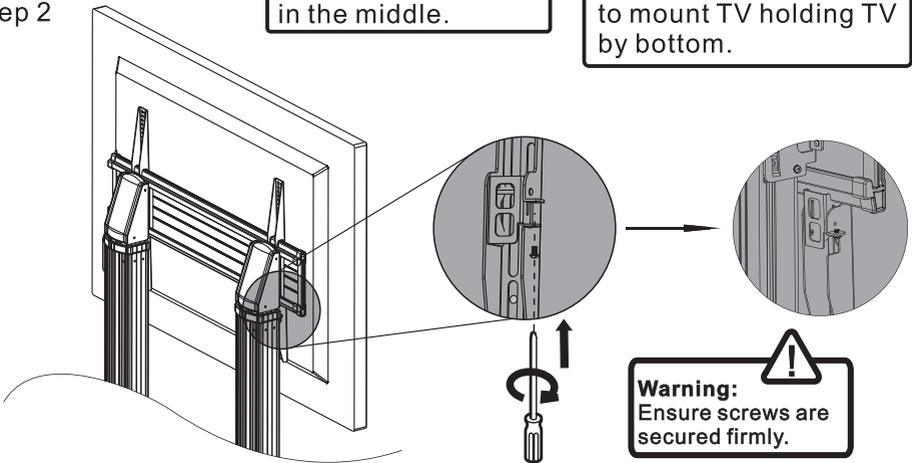


Step 3

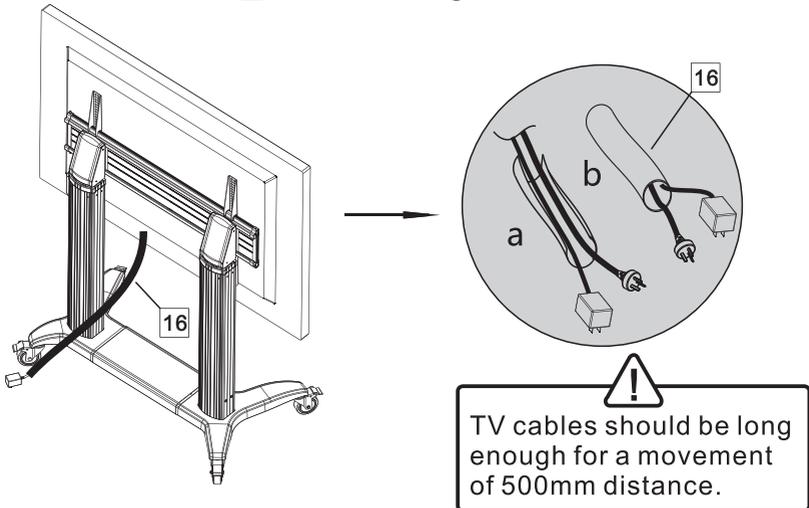


## 8. Video tray installation



Step 1

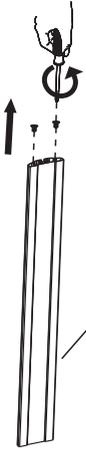


Step 2

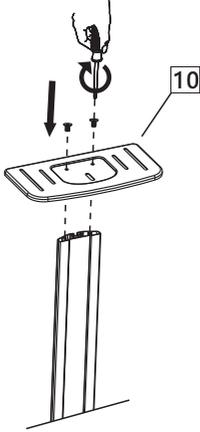

Step 3  
Release 2 screws

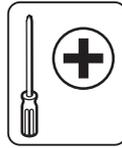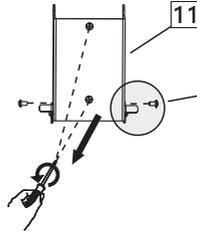


Step 4

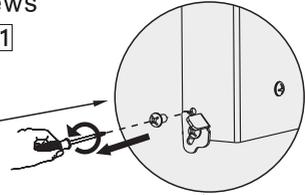


Step 5




Step 6

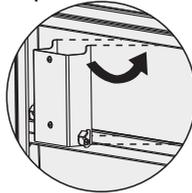


Step 7

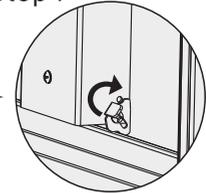


Step 9

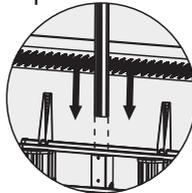

Step 8

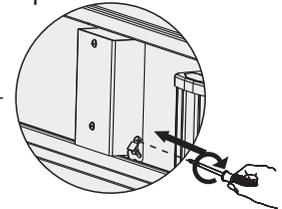


Step 10

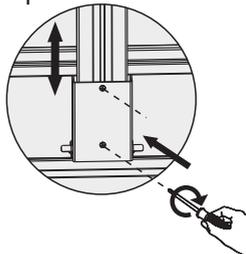

Note:  
Adjustable height.

Warning:  
Ensure screws are  
secured firmly.

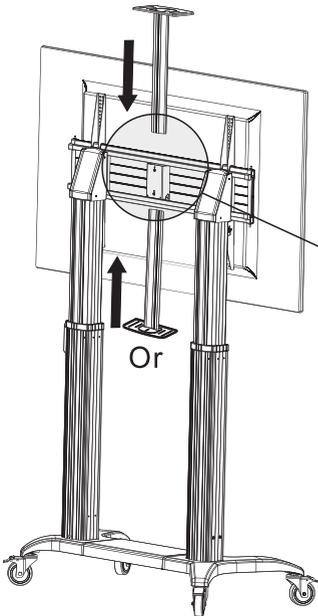

## 9. Safety instructions(Read carefully)

### Pay attention when use

1. Make sure TV weight within 135kg;
2. Make sure TV mounted in the middle, avoiding any damage or loss caused by uneven loading weight.
3. Cart shall be free of knock when operation.
4. Electric wire should be long enough when moving cart up, avoiding any damage to the wires by over-stretching, in case of accidents like crepage or electric shock.
5. Do not locate cart on inclined or uneven surface, avoiding any damage or loss caused by cart tipping over.
6. Unlock the caster brakes before moving cart. Push and move cart slowly to the specific location. Must lock the caster brakes after move!
7. No use of worn-out wires.
8. Pull out the power plug from socket by holding plug head. It is strictly forbidden to drag wires.
9. The maximum load parameter of the power adapter is 29V/6A, The continuous working time of the product can not exceed 3 minutes.
10. This appliance can be used by children aged from 16 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

11. ①Disconnect the supply when carrying out maintenance and cleaning;  
②Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused or does not work, contact the supplier for further information.  
③Do not allow children to play with fixed controls and remote controls.  
④When operating a switch that initiates and maintains the movement of the Product or terminates the movement of the Product or causes a change of the direction of the movement of the Product, make sure that other persons are kept away.

# Troubleshooting

## Guidance on Malfunction Code:

When cart works abnormally, there will be a malfunction code flashing on the control panel, indicating you the possible problem. Please take action advised below to solve the problem.

Code	Problem	Action
E01	Left electric motor unconnected	Check and make sure the left electric motor is well connected with the control wire.
E02	Right electric motor unconnected	Check and make sure the right electric motor is well connected with the control wire.
E03	Over current in Left electric motor	Over-weight on left side. Locate TV to the middle.
E04	Over current in Right electric motor	Over-weight on right side. Locate TV to the middle.
E05	Over current in Main electric motor	Over-weight on cart. Make sure all weight loaded on cart within capacity.
E06	Electric motor overheat	Operate too long period of time. The motor will be enforced to cool down after 3 minutes continuous work, and it cools after 15 minutes.
E08	Out of balance	At least 4mm height difference between two columns when they slide. Restore factory settings

# 10. M Motorized Public Floorstand Dual Pillar 180 HD

