

Ultra HD Video Wall Processor

iWall 209



User Manual

VER 1.1

www.infobitav.com

Thank you for purchasing this product

For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

Surge protection device recommended

This product contains sensitive electrical components that may be damaged by electrical spikes, surges, electric shock, lighting strikes, etc. Use of surge protection systems is highly recommended in order to protect and extend the life of your equipment.

Table of Contents

1. Introduction

This product is an HDMI 2.0 Video Wall controller with 2 HDMI inputs, 2 HDMI loop outputs and 9 HDMI scaling outputs for video wall processing. The Toslink jack terminal provides analogue L/R audio and digital SPDIF audio output. 5-pin phoenix jacket provides balanced L/R audio output. The product also supports RS-232 bypass feature for daisy chain and cascade connection among different units.

2. Features

- ☆ HDMI 2.0 and HDCP 2.2 compliant
- ☆ Support multi-resolution up to 3840x2160@60Hz video output for video wall
- ☆ Support Bezel Compensation with two modes
- ☆ Support 2 channels HDMI loop out
- ☆ Support PIP on video wal
- ☆ Support 180° rotation
- ☆ Support RS-232 and TCP/IP control
- ☆ Support CEC control with displayers by PC Tool or commands

3. Package Contents


- 1 x Ultra HD Video Wall Processor
- 2 1 x AC Power Cord
- (3) 1 x 5-pin Phoenix Connector
- (4) 2 x 3-pin Phoenix Connector
- (5) 1× RS232 to Phoenix Cable
- 6 1× CAT6 cable
- ⑦ 1× USB to RS232 Cable
- ⑧ 1× User Manual

4. Specifications

Technical	
HDMI Compliance	HDMI 2.0
HDCP Compliance	HDCP 2.2/1.4
RS-232	Baud rate: 57600, data bit: 8, Stop bit: 1, no parity
Input Video Formats	1024x768@60, 1280x800@60, 1280x1024@60, 1280x960@60, 1360x768@60, 1366x768@60, 1440x900@60, 1400x1050@60, 1600x900@60, 1600x1200@60, 1680x1050@60, 1920x1200@60, 480p@60, 576p@50, 720p@50, 720p@60, 1080i@50, 1080i@60, 1080p@24, 1080p@25, 1080p@30, 1080p@50 1080p@60, 3840x2160@24, 3840x2160@25, 3840x2160@30, 3840x2160@50, 3840x2160@60, 4096x2160@24, 4096x2160@30, 4096x2160@50, 4096x2160@60
Audio Format	2.0 channel, 5.1 channel, LPCM, Dolby, AC3, DTS
ESD Protection	Human-body Model: ±8kV (Air-gap discharge) , ±4kV (Contact discharge)
Mechanical	
Housing	Metal Enclosure
Color	Black
Dimension	430mm (W)×220mm (D)×44mm (H)
Weight	5Kg
Supply Voltage	110-220V AC
Operating Temperature	0°C ~ 40°C / 32°F ~ 104°F
Storage Temperature	-20°C ~ 70°C / -4°F ~ 158°F
Relative Humidity	10%~50% RH (non-condensing)


5. Operation Controls and Functions

Front Panel

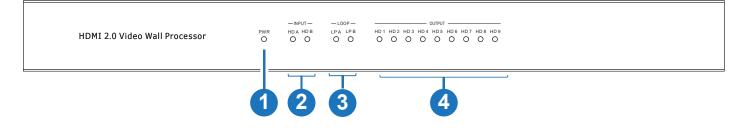

No.	Name	Function Description
1	Power LED	Power LED will be on when the unit is powered on.
2	INPUT LED	The LED will be on when the corresponding HDMI input port is connected to active HDMI source device.
3	LOOP LED	The LED will be on when the corresponding LOOP OUT port is connected to HDMI display device.
4	OUTPUT LED (1-9)	The LED will be on when the corresponding HDMI output port is connected to HDMI display device.

Rear Panel

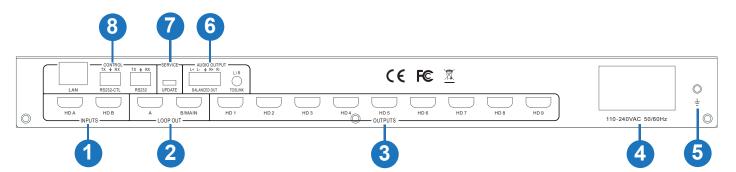


No.	Name	Function Description	
1	INPUTS	HDMI signal input ports, connect to HDMI source device such as DVD or PS4 with HDMI cable.	
2	LOOP OUT	HDMI signal loop out ports. Loop out HDMI A/B signal to downstream. It can be configured by RS-232 command.	
3	OUTPUTS	HDMI signal scaling output for video wall.	
4	110-240VAC	110-240V AC power input port.	
5	GND	Ground the product housing.	
6	AUDIO OUTPUT	 TOSLINK: Anolog L/R audio output 3.5mm Stereo Jack. 20Hz ~ 20kHz, 1.5Vrms max Digital SPDIF audio output BALANCED OUT: Balanced audio output port. 5-pin phoenix connector, 20Hz ~ 20kHz, 1.5Vrms max. 	
7	SERVICE	Firmware update port.	
8	CONTROL	RS232: Bypass RS232-CTL commands to next unit. RS232-CTL: External RS-232 control, Baud Rate: 57600 Data Bits:8, Parity: None Stop Bits:1 LAN: Network port for TCP/IP control. Connect to an active Ethernet link with an RJ45 cable.	

6. RS-232/LAN Control Connection


6.1 RS-232 Control Connection

The product supports RS-232 control. Connect the RS232-CTL port of the product to a PC via a serial cable, as shown in the following figure:

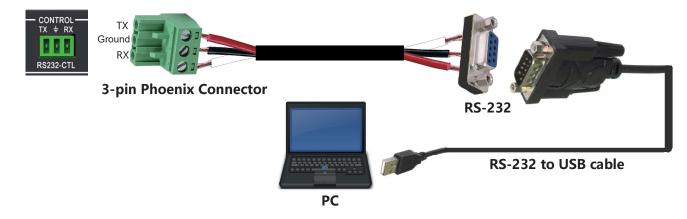

6.2 Network Control Connection

The product also supports Network control. Connect the LAN port of the product to a PC via an UTP cable, as shown in the following figure:

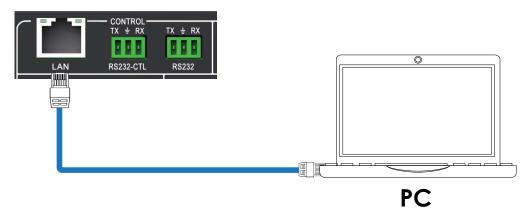

7. PC Tool User Guide

The PC tool is an installation-free control software that supports both UART and network control. It consists of five parts: Matrix Switch, Signal Setting, FineTune:PQ, Video Wall and CEC Control. The UI is as follows:

Matrix Switch	Signal Set	tting FineTune:PQ Vid	eo Wall CEC Control			English 🔻
OUTP	UTS	INPUT HD A HD B	LOOP OUT	INPUT HD A HD B	AUDIO OUTPUT	^
HDMI 1	01		B/MAIN 1		Audio Output 1 🤍 1	
HDMI 2	02					
HDMI 3	03					
HDMI 4	04					
HDMI 5	0 5					
HDMI 6	6					
HDMI 7	07					
HDMI 8	8 0					11. II.
HDMI 9	0 9					
Allset HD A	•	EDID	Reset			
Ctrl Mode		Port COM3 -	Chattan Comparised			
O UART C	Network	Port COM3 🔻	Status Connected		Reading: Output Board9 ->Signal Type success Reading: Output Board9 ->Signal Type success	^
Device Name		IP Address	MAC Address	Version	Reading: Output Board9 ->Signal Resolution suc Reading: Output Board9 ->Signal Resolution suc	
K3		STATIC,192.168.0.247	A6 4C 5E E4 C3 A2	V-ZX1.3.4	Reading: Output Board9 ->Signal Resolution suc Reading: Screen Combine success	cess
					Reading: All Information success!	
		Find via	UART	Note: Please W/		

Matrix Switch Page

1. You can select **UART** (with RS232 cable) or **Network** to connect device, baud rate is 57600 bps.

- 2. Select input source for each scaling output port.
- 3. "AllSet" function: Select HD A or B input source to all the scaling output.
- 4. Select input source for B/MAIN output port.
- 5. Select audio source for balanced audio output and Mini Toslink output.
- 6. Reset: The PC tool supports reset system to recover to factory configuration.

7. EDID Control: Click the "EDID" button on the Matrix Switch page, there will be a pop-up EDID control window.

1			
			Save Read
EDID C	onfigure (Devi	cce ID)	
01			
	EDID Mode		Open Write
	LUID MOUL		J Open Write
0%		4K60-2.0CH	100%
		4K60-5.1CH	
00	01 02 03 04	4K30-2.0CH	A OB OC OD OE OF
10000	01 01 05 04	1080P-2.0CH	
00		1080P-5.1CH	
10		720P-2.0CH	
20 30		1024x768-2.0CH	
40		1920x1200-2.0CH	
50		1680x1050-2.0CH	
60		1600x1200-2.0CH	
70		1440x900-2.0CH	
80		1400x1050-2.0CH	
90		1360x768-2.0CH	
AØ		1280x1024-2.0CH	
1000		MANUAI	
BØ			

- a) Read each scaling output port downstream EDID and save as a BIN file.
- b) Open an existing EDID file and write to the HDMI A and B input port as Manual EDID.
- c) Select predefined EDID and write to HDMI A and B input ports.

Predefined EDID option is as below:

4K60-2.0CH	1920x1200-2.0CH
4K60-5.1CH	1680x1050-2.0CH
4K30-2.0CH	1600x1200-2.0CH
4K30-5.1CH	1440x900-2.0CH
1080P-2.0CH	1400x1050-2.0CH
1080P-5.1CH	1360x768-2.0CH
720P-2.0CH	1280x1024-2.0CH
1024x768-2.0CH	Manual

Signal Setting Page

User can read the resolution of each input port and set the resolution of each scaling output.

input Board-Read All	Output Board- Read All	
abel Input Type Input Format	Label Output Type	Output Format
HD A HDMI 💌 3840x2160p60 Read	1 UHD-HDMI	1920x1080@6 🔻 Read
ID B HDMI 🔻 No Signal Read	2 UHD-HDMI	1920x1080@6 🔻 Read
	3 UHD-HDMI 🔻	1920x1080@6 🔻 Read
	4 UHD-HDMI	1920x1080@6 🔻 Read
	5 UHD-HDMI	1920x1080@6 🔻 Read
	6 UHD-HDMI] 1920x1080@6 🔻 Read
	7 UHD-HDMI	1920x1080@6 🔻 Read
	8 UHD-HDMI	1920x1080@6 🔻 Read
	9 UHD-HDMI	1920x1080@6 🔻 Read

Available output resolutions:

No.	Output Resolution Setting	No.	Output Resolution Setting
1	3840x2160p 60Hz	9	1440x1050 60Hz
2	3840x2160p 50Hz	10	1366x768 60Hz
3	3840x2160p 30Hz	11	1360x768 60Hz
4	3840x2160p 25Hz	12	1280x1024 60Hz
5	1920x1200 60Hz	13	1280x768 60Hz
6	1920x1080p 60Hz	14	1280x720p 60Hz
7	1920x1080p 50Hz	15	1280x720p 50Hz
8	1600x1200 60Hz	16	1024x768 60Hz

Note: 3840x2160 25/30Hz can only be used for standalone display, not for video wall.

FineTune:PQ Page

You can read and set the Brightness/Contrast/Saturation/Sharpness of each output.

Matrix Switch	Signal Setting	FineTune:PQ	Video Wall	CEC Control
	—Select PQ Fir	neTune Port-O	utput1 🔻	
	Brightness		50	
	Contrast		50 R	ead
	Saturation		50 R	eset
	Sharpness		50	
1	Temperature	Cool 🔻	Read	
	R-Gain	0		
	G-Gain			ead
	8-Gain	J	R	eset
	R-Offset	0 0		
	G-Offset			ead
	B-Offset	J	R	eset

Note: Suggest always use the default setting 50/50/50. Do not change the default settings without special conditions; If there is a problem after changing, click "Reset" to return to the factory settings.

CEC Control Page

Device ID	1	Auto Powe	er ON		
			Output		
Output 1	Power ON	Power OFF	Volume+	Volume-	Mute/Unmute
Output 2	Power ON	Power OFF	Volume+	Volume-	Mute/Unmute
Output 3	Power ON	Power OFF	Volume+	Volume-	Mute/Unmute
Output 4	Power ON	Power OFF	Volume+	Volume-	Mute/Unmute
Output 5	Power ON	Power OFF	Volume+	Volume-	Mute/Unmute
Output 6	Power ON	Power OFF	Volume+	Volume-	Mute/Unmute
Output 7	Power ON	Power OFF	Volume+	Volume-	Mute/Unmute
Output 8	Power ON	Power OFF	Volume+	Volume-	Mute/Unmute
Output 9	Power ON	Power OFF	Volume+	Volume-	Mute/Unmute

If **Auto Power On** is enabled, every time when the product is turned on, it will turn on all displayers which are connected to it.

The product supports CEC function, including Power on/off, Volume+/-, Mute/Unmute.

Video Wall Page

This page is used to configure a group of outputs to function as a video wall.

Rows 3 Columns 3 Available 9 Set	Read	Screen 1	Screen 2	Screen 3
	Setting	Screen 4	Screen 5	Screen 6
Right(Pixels) Top(Pixels) Bottom(Pixels)		Screen 7	Screen 8	Screen 9

- 1. Use the Video Wall Setting controls to change how the displays are arranged on the Video Wall page:
 - a. Adjust the Rows and Columns sliders to change the displayed screen arrangement to permit proper Drag-and-Select of the desired screens for the video wall.
 - b. Change the Available slider to set how many outputs will be used for the Video Wall.
 - c. Click the "Set" button to change the Screen configuration.
- 2. Use the left mouse button to drag-select the screens that will be set for video wall mode. The selected screens will be shown as bright blue.
- 3. Use the right mouse button to open a menu.
- 4. Select "Screen Stitching" from the menu to program the video wall mode. The selected screens will now be shown as bright green.
- 5. To change the displayed image: either use the methods detailed in the section Controlling the Matrix Switcherright-click to open the pop-up menu and select the desired input from the "Input Select" menu option.

6. Repeating steps 2 ~ 5 above with a different set of outputs allows the creation of a second video wall. However, changing the Rows, Columns and Available sliders will automatically delete the current video wall set up when the "Set" button is clicked. The following example shows a more unusual video wall set-up of two video walls with 1x3 and 2x2 configurations:

Rows 3 Columns 3 Available 9		Screen 1	Screen 2	Screen 3
Type: 💿 A	I Setting	Screen 4	Screen 5	Screen 6
Left(Pixels) Right(Pixels) Top(Pixels) Bottom(Pixels)	0 0 0	Screen 7	Screen 8	Screen 9

Video Wall Context Menu

Right clicking on any of the screen icons will display the following context menu:

Screen Splicing	
Cancel Splicing	
Screen 2 - Cancel Spli	cing
Input Select	•
Output Select	,
Output Type	•
Output Format	•
Mirror	•
Test Pattern	•

Screen Stitching	This option connects the selected screens into a video wall configuration.			
	g Return the Video Wall configuration to normal outputs.			
Screen x – Cancel Stitching	Remove the single screen x from the video wall to allow the displaying another full frame image within the video wall configuration, as shown in this example:			
Input Select	Use the sub-menu to select the input to display on the video wall or the secondary input image shown in the above example.			
Output Select	This option is only available for any screen that is not assigned to a video wall mode.			
Output Type	This option is only available for any screen that is not assigned to a video wall mode.			
Output Format	This option is only available for any screen that is not assigned to a video wall mode. It allows setting of the output resolution for the selected screen output.			
Mirror	Four sub options : OFF (default), H (Horizontal), V (Vertical) , H+V When select H+V, you can make 180° rotation with the selected screen.			
Test Pattern	When Test Pattern is enabled, the output will display Color Bar pattern.			

Bezel Setting

The Bezel Setting section allows the entry of values to compensate for the display bezel thickness. These values may be entered either as pixels (Type A) or as millimetre (Type B). *Type A Bezel Settings*

The image size will be adjusted to allow for the number of pixels entered in each of the entry boxes. Click the "Set" button to view the effect of the new values.

Type B Bezel Settings


The image size will be adjusted to allow for the Inner and Outer display dimensions as entered in each of the entry boxes. Click the "Set" button to view the effect of the new values.

Bezel Compensation

The following images demonstrate the effect of not having bezel compensation and what a correctly configured bezel compensation settings should produce:



No Bezel Compensation

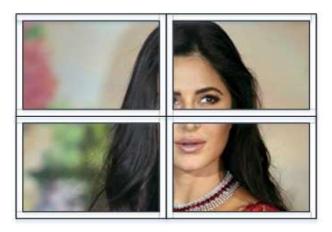

Correct Bezel Compensation

Layout Save/Load


The Save Scene/Layout and Load Scene/Layout buttons allow a video wall configuration to be saved or recalled at any time. Up to 10 configurations, each with their own name can be saved or recalled. When saving, each Scene can optionally be given a name to identify that video wall scene setup.

8. Safety Instructions

To ensure reliable operation of this product as well as protecting the safety of any person using or handling this device while powered, please observe the following instructions.

- 1. Do not operate either of this product outside the specified temperature and humidity range given in the above specifications.
- 2. Ensure there is adequate ventilation to allow this product to operate efficiently.
- 3. Repair of the equipment should only be carried out by qualified professionals as these products contain sensitive devices that may be damaged by any mistreatment.
- 4. Only use this product in a dry environment. Do not allow any liquids or harmful chemicals to come into contact with these products.

9. Connection Diagram

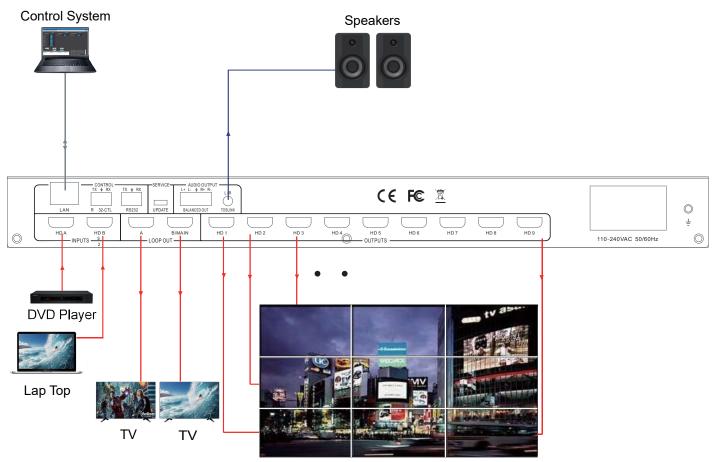

TV x 9

